


WWW.VALSPRAY.IT
INFO@VALSPRAY.IT

WET/DRY VACUUM CLEANER

—
OPERATION MANUAL

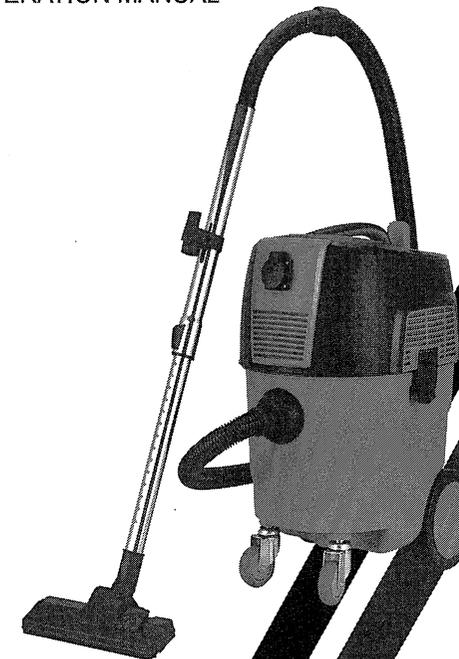

MVC3601-08VS

Due to product improvements, the illustrations and photos may be slightly different from the actual product.

Vacuum cleaner


Attention:

Before cleaning or maintaining the appliance, the power plug must be removed from the socket-outlet

- Attention: Before assembly and starting operation, read the operating instructions carefully
- Check that the mains voltage corresponds to the details on the type plate
- Only connect to a proper 220-240 volt, 50-60Hz socket
- Minimum fuse protection 13A
- Pull the mains plug out of the socket when: the unit is not in use, before opening the unit, before cleaning and maintenance
- Never clean with solvents
- Do not use the cable to pull the plug out of the socket
- When unit is ready for use, do not leave unattended
- Safeguard from children
- Care must be taken that the mains connection lead is not damaged by being driven over, crushed, stretched, etc
- The unit must not be operated if the mains connection lead is not in perfect condition
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent to a similarly qualified person in order to avoid a hazard.
- On no account vacuum: burning matches, glowing ashes and cigarette ends, inflammable, corrosive, fire hazard or explosive substances, vapours and liquids
- This unit is not suitable for vacuuming dust which is damaging to health
- Store the unit in a dry place
- Do not operate a defection unit
- Servicing only by an authorized after-sales service point
- Use only for operations for which the unit is intended
- Take great care when cleaning stairs
- Use only manufacturer's attachments and spare parts
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- IPX4 is only granted by connect an IPX4 plug to socket-out of the appliance or the cover of the socket-out is closed.
- Max. load of socket-out: 2000W.

Technical data:

Maintenance – cleaning

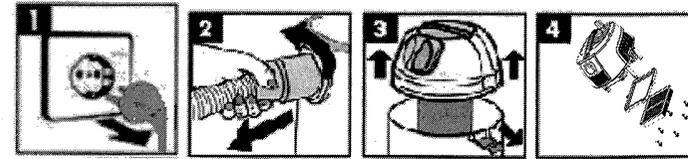

Unplug before maintenance (Figure 1). Take the motor housing off(Figure 3) from the tank.

Unscrew the filter lock(12) by hand, and take out the HEPA filter(11). Clean it by blowing it with a high pressure air gun. Or replace it with a new HEPA filter if necessary.

IMPORTANT: Do not use water or detergents to clean the HDPE filter.

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Warranty Information

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year, starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.


The repairs under warranty may only be carried out by an authorized service center. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

Insert the plug and turn on the switch, then appliance starts to work (Figure 4 & 5)

Dry vacuum-cleaning

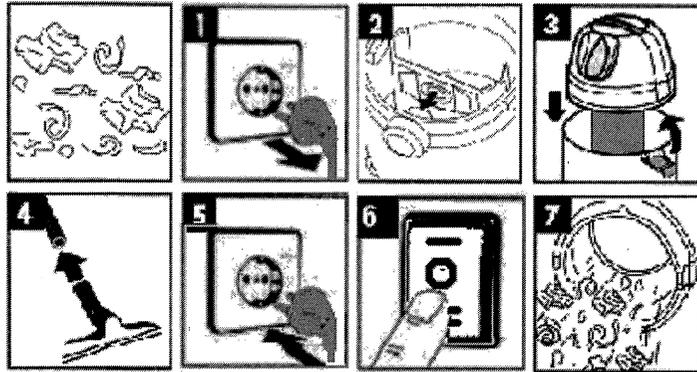

Unplug(Figure 1), take out the fabric dust bag(figure 2) and empty it. Then assemble it back(figure 2). Select the correct nozzle or floor brush, assemble it onto the metal tube(Figure 3) for dry vacuum-cleaning.

Insert the plug and turn on the switch, then appliance starts to work (Figure 5 & 6)

Please note:

Figure 2: Use the supplied fabric dust bag only for dry vacuum-cleaning.



Switch:

Input mode ("I" position) - When the switch is placed in the input mode position, the vacuum cleaner will operate to provide suction independently. Any tools can be connected to the vacuum's inlet and it will function to extract debris.

Off mode ("O" position) - With the switch in the off position, the vacuum cleaner will not operate at all and no suction will be provided.

Automatic mode ("II" position) - When the switch is placed in the automatic mode position, the vacuum cleaner is programmed to activate approximately 3-5 seconds after any tool connected to and switched on at the vacuum's outlet socket. It will provide suction support to the connected power tool. Similarly, the vacuum will automatically shut off around 10 seconds after the power tool is switched off. This ensures suction is applied only when needed for the given task.


The Maximum power output of the socket-outlet(3) is 2000W.

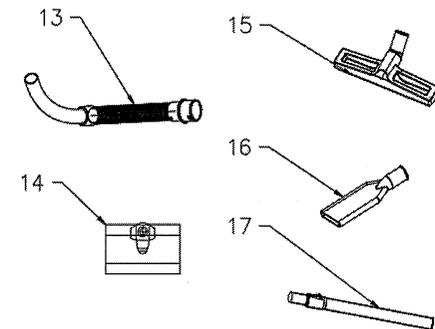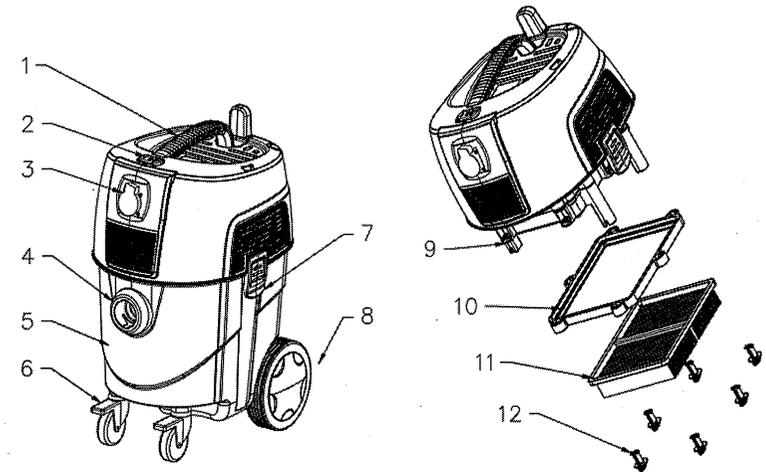


Items supplied:

- | | |
|---------------------|------------------------|
| 1. Handle | 10. HEPA filter |
| 2. ON/OFF switch | 11. HEPA filter platen |
| 3. Socket-outlet | 12. Filter lock screw |
| 4. Air inlet | 13. Hose |
| 5. Tank | 14. Fabric dust bag |
| 6. Front wheel | 15. Floor brush |
| 7. Lock hook | 16. Nozzle |
| 8. Rear wheel | 17. Metal tube |
| 9. HEPA filter base | |

Overview of nozzles

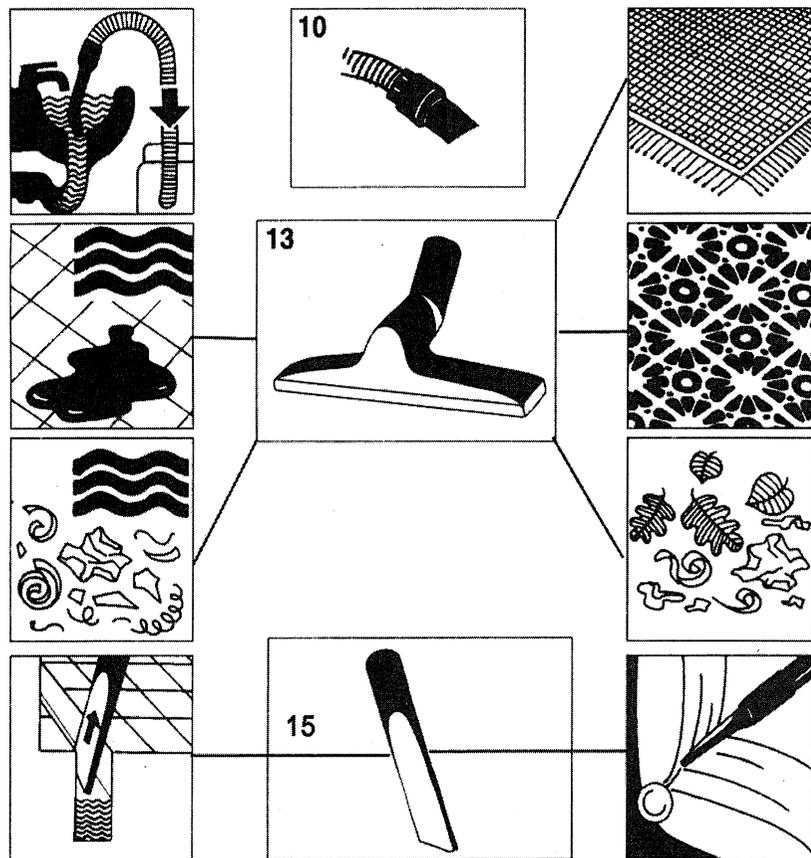


Assembly

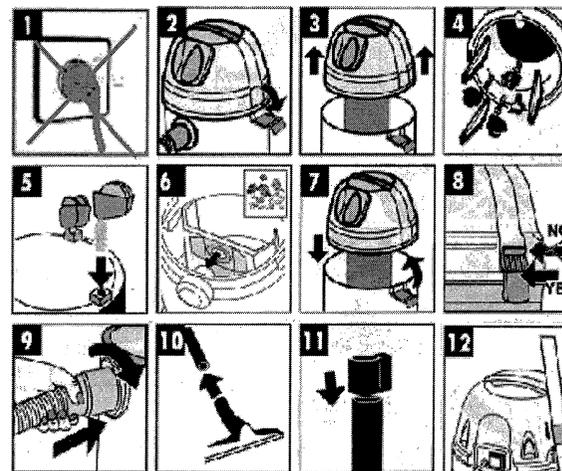

Please note:

Figure 6: The fabric dust bag(14) is not suitable for wet vacuum-cleaning! Use the supplied fabric dust bag only for dry vacuum-cleaning.

Wet vacuum - cleaning

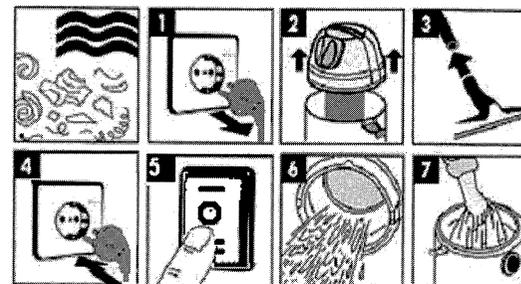

Unplug(Figure 1) and take the motor housing off(Figure 2). Take out the fabric bag inside the tank after dry vacuum-cleaning(Figure 2). Assemble the floor brush onto the metal tube(Figure 3) for wet vacuum-cleaning.